

Talking Sounder Table

Message Number	Description	Preamble Tone	Duration(s)	Message Text
1	Female evacuation V1	Warble	9.4	Attention please, attention please. Fire has been reported in the building, please leave the building immediately by the nearest exit
2	Female alert	Pulse	7.5	May I have your attention please, an incident has been reported in the building please listen for further instructions
3	Female evacuation V2	Warble	7.5	Attention, attention. This is an emergency. Please leave the building by the nearest available exit
4	Female test	Warble	3.5	This is a test message, no action is required
5	Male evacuation V2	Warble	8	Attention, attention. This is an emergency. Please leave the building by the nearest available exit
6	Male alert	Pulse	8.1	May I have your attention please, an incident has been reported in the building. Please listen for further instructions
7	Male test	Warble	4	This is a test message, no action is required
8	Bell (accessed via msg 14/15)	None	Until Stopped	None
9	No tone or message	None	0	Used by control panel to allow user to 'turn off' sounder part of a talking sounder beacon
10	Bespoke message	W,P or C	max 10 sec	Client defined (must be stated when ordering sounder) additional cost
11	Warble electronic tone	None	Until Stopped	None
12	Pulsed electronic tone	None	Until Stopped	None
13	Continuous electronic tone	None	Until Stopped	None
14	Pulsed bell	None	Until Stopped	None
15	Continuous bell	None	Until Stopped	None

The preamble tone is played for 4 seconds, then a 1 second silence, then the message, then silence until the sequence is re-triggered. This sequence trigger is panel adjustable; preset to 15 seconds.

Company Policy is one of continuous improvement, we reserve the right to change specification without prior notice

Protec Fire Detection Plc, Protec House, Churchill Way, Nelson, Lancashire, BB9 6RT

Tel: 01282 717171 Fax: 01282 717273 Web: www.protec.co.uk Email: sales@protec.co.uk